 


4030 SERIES

CYLINDERS

CYLINDER, 4031-3071

 
Standard, non-handed cast iron cylinder assembly.

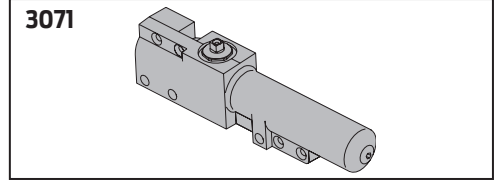

ARMS

REGULAR ARM, 4030-3077

Non-handed arm mounts hinge side or top jamb. P4031 closer includes PA SHOE, 4030-62PA is required for parallel arm mounting.

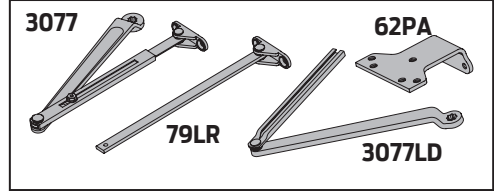


LIGHT DUTY ARM, 4030-3077LD

Optional non-handed stamped arm mounts hinge side, top jamb or parallel arm (62PA required).

PA SHOE, 4030-62PA

 Required for parallel arm mounting.

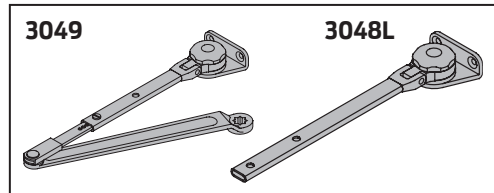


LONG ARM, 4030-3077L

Optional non-handed arm includes LONG ROD AND SHOE, 4030-79LR for top jamb mount with deep reveals.

HOLD-OPEN ARM, 4030-3049

 Optional, non-handed arm mounts hinge side, top jamb or parallel arm (62PA required). Hold-open adjustable at shoe.

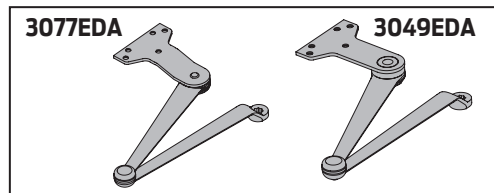


LONG HOLD-OPEN ARM, 4030-3049L

Optional non-handed arm includes LONG HEAD AND TUBE, 4030-3048L for top jamb mount with deep reveals.


EXTRA DUTY ARM, 4030-3077EDA

 Optional, non-handed parallel arm features solid forged steel main and forearm for potentially abusive installations.

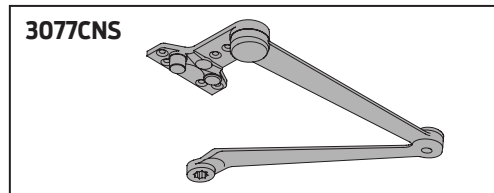

HOLD-OPEN EDA ARM, 4030-3049EDA

 Optional handed arm, provides hold-open function adjustable at shoe.

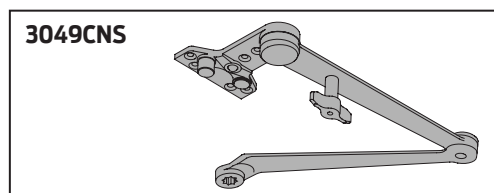


CUSH-N-STOP® ARM, 4030-3077CNS

Optional, non-handed parallel arm features solid forged steel main arm and forearm with stop in soffit shoe.

HOLD-OPEN CUSH ARM, 4030-3049CNS

 Optional non-handed arm, provides hold-open function with templated stop/hold-open points. Handle controls hold-open function.

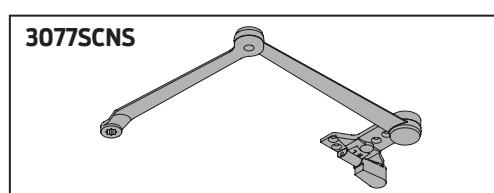


SPRING CUSH ARM, 4030-3077SCNS

Optional, non-handed parallel arm for abusive applications features solid forged steel main arm and forearm with spring loaded stop in the soffit shoe.

SPRING HCUSH ARM, 4030-3049SCNS

 Optional, non-handed parallel arm for abusive applications features solid forged steel main arm and forearm with spring loaded stop in the soffit shoe. Handle controls hold-open function.

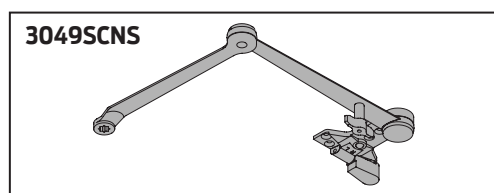


4030 SERIES

COVERS

COVER, 4030-72MC

 
Non-handed metal cover.

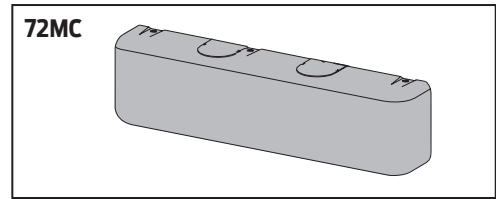

INSTALLATION ACCESSORIES

PLATE, 4030-18TJ

 Required for top jamb mounting where head frame is less than 2-1/4" (57 mm) or flush ceiling condition exists. Plate requires 1-1/2" (38 mm) minimum.

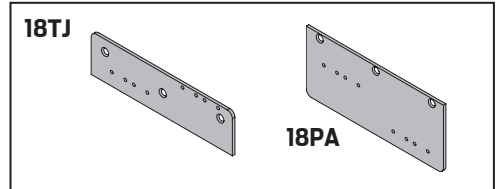


PLATE, 4030-18PA

Required for parallel arm mounting where top rail is less than 5" (127 mm), measured from the stop. Plate requires 1-3/4" (44 mm) minimum.

CUSH SHOE SUPPORT, 4030-30

 Provide anchorage for fifth screw used with CUSH arms where reveal is less than 3-1/16" (78 mm).

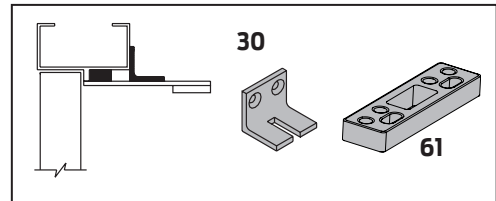


BLADE STOP SPACER, 4030-61

Lowers parallel arm shoe to clear 1/2" (13 mm) blade stop.

AUXILIARY SHOE, 4030-62A requires a top rail of 7" (178 mm).

 Optional shoe replaces -62PA for parallel arm mounting of regular arm with some overhead holder/stop. Consult factory.

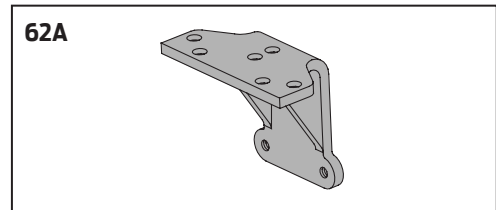

PA FLUSH PANEL ADAPTER, 4030-419

Provides horizontal mounting surface for PA or CUSH shoe on single rabbeted or flush frame.

