


DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 5/8"	2 3/16"
SINGLE DOOR	3 5/8"	2 3/16"

NOTE: BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED.

APPLICATION	PREPARATION
SURFACE APPLICATION OR 990 TRIM APPLICATION	#10-24 TAP-4 PLACES
210 TRIM APPLICATION	1/4" DIA. THIS SIDE
290 TRIM APPLICATION	13/32" DIA. OPPOSITE SIDE - 4 PLACES
SEX BOLT APPLICATION	

7/8" DIA  
FOR K, L & TP  
1/2" DIA FOR NL-OP

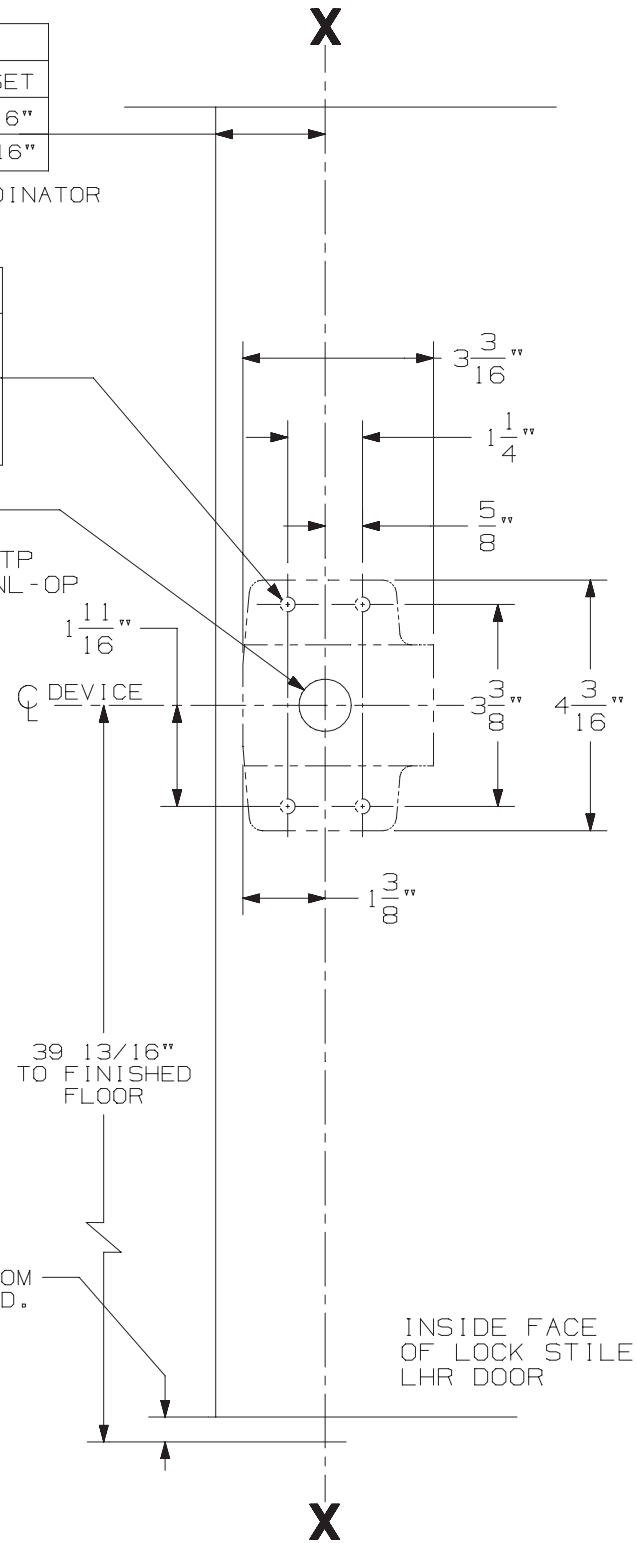

NOTE: RECOMMENDED DOOR UNDERCUT IS 1/4" FROM FINISHED FLOOR OR 1/8" FROM THRESHOLD.

NOTE: LATCH CASE PREPARATION TO BE MADE AT INSTALLATION ON DOOR.

NOTE: IT IS RECOMMENDED THE MOUNTING HOLES BE PREPARED IN THE FIELD.

REMOVE GLASS STOP HEAD OR BEAD IN AREA OF DEVICE IF REQUIRED

FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE ADDITIONAL TRIM TEMPLATE.

LHR SHOWN  
RHR OPPOSITE

**2227 & 2227-F EO, DT, K, L, & TP Series  
Vertical Rod Device**

**VON DUPRIN®**

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER:

10013\_a

DATE:  
05-15-13