


NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

330, 350, TBSK330, & TBSK350
Push Bar Trim

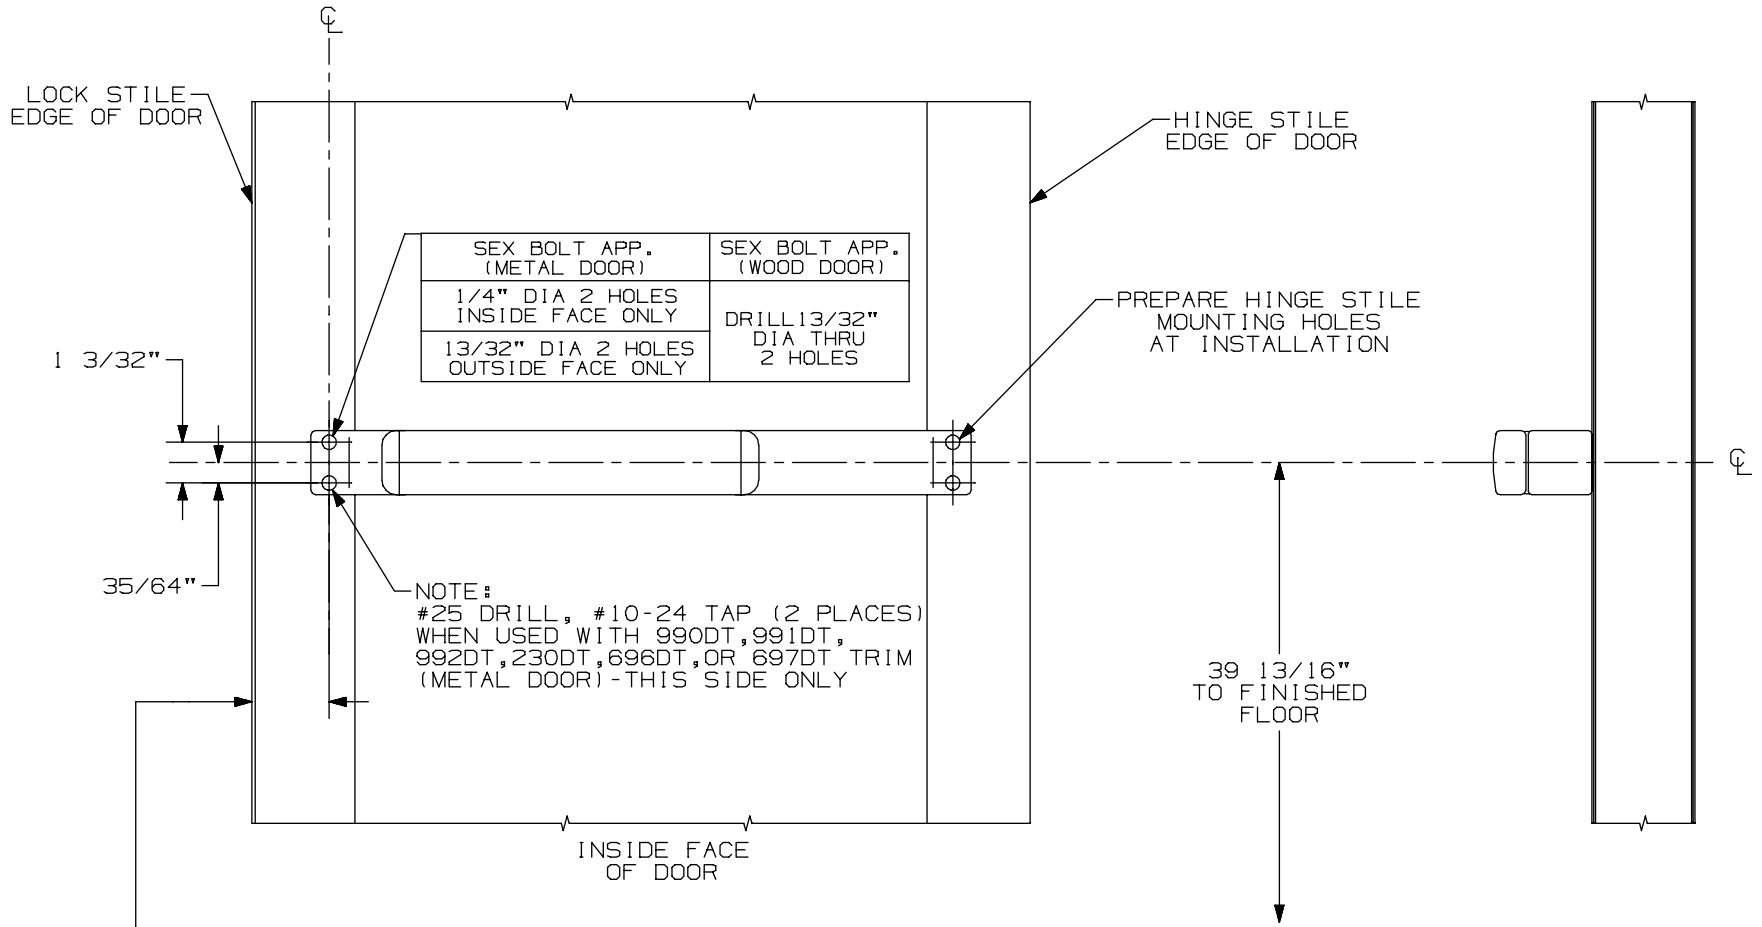

SEX BOLT APP. (METAL DOOR)	SEX BOLT APP. (WOOD DOOR)
1/4" DIA 2 HOLES INSIDE FACE ONLY	DRILL 13/32" DIA THRU 2 HOLES
13/32" DIA 2 HOLES OUTSIDE FACE ONLY	

NOTE:
 #25 DRILL, #10-24 TAP (2 PLACES)
 WHEN USED WITH 990DT, 991DT,
 992DT, 230DT, 696DT, OR 697DT TRIM
 (METAL DOOR) - THIS SIDE ONLY

39 13/16"
 TO FINISHED
 FLOOR

LHR SHOWN
 RHR OPPOSITE

TRIM INSTALLATION SCHEDULE

	INSTALLATION	STILE SIZE	BACKSET
④	SINGLE DOOR 1/2" STOP & BACK TO BACK WITH 386DT, 337DT OR 696/697DT TRIM ON SINGLE DOOR 1/2" STOP	1 3/4"-3"	1 5/16"
④	SINGLE DOOR 5/8" STOP & BACK TO BACK WITH 386DT, 337DT OR 696/697DT TRIM ON SINGLE DOOR 5/8" STOP	1 7/8"-3"	1 7/16"
④	PAIR OF DOORS WITHOUT MULLION & BACK TO BACK WITH 386DT, 337DT OR 696/697DT TRIM ON PAIR OF DOORS WITHOUT MULLION	1 3/4"-3"	1 5/16"
	SINGLE DOOR PAIR OF DOORS WITHOUT MULLION BACK TO BACK WITH 990DT, 991DT, 992DT, OR 230DT	3"-FLUSH	1/2 OF STILE

VON DUPRIN®

TEMPLATE
 NUMBER: **20030_a**

DATE:
 05-23-13