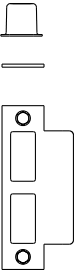
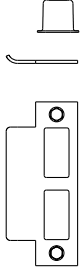

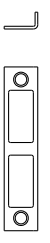

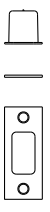
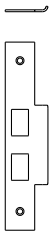
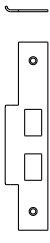
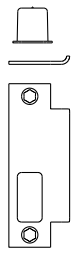
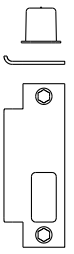
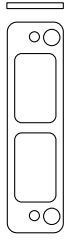
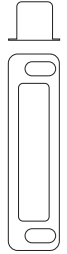


## Strikes

<p><b>Square Corner 10-072</b></p> <p>Standard 1<math>\frac{3}{16}</math>" Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Square Corner 10-072</b></p> <p>7<math>\frac{1}{8}</math>", 1", 1<math>\frac{1}{2}</math>", 1<math>\frac{3}{4}</math>" or 2" Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Square Corner 10-073</b></p> <p>No Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Square Corner 10-075</b></p> <p>No Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1"</p>
<p><b>Square Corner 10-078</b></p> <p>L400 Series</p> <p>No Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Square Corner 10-079</b></p> <p>L400 Series</p> <p>No Lip</p>  <p>Size: 3<math>\frac{1}{2}</math>" x 1<math>\frac{1}{8}</math>"</p>	<p><b>Square Corner 10-091</b></p> <p>L &amp; RR (Armor)</p> <p>1<math>\frac{3}{16}</math>" Lip</p>  <p>Size: 8" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Square Corner 10-091</b></p> <p>R &amp; LR (Armor)</p> <p>1<math>\frac{3}{16}</math>" Lip</p>  <p>Size: 8" x 1<math>\frac{1}{4}</math>"</p>
<p><b>Square Corner XL11-820</b></p> <p>R &amp; LR</p> <p>1<math>\frac{3}{16}</math>" Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Square Corner XL11-821</b></p> <p>L &amp; RR</p> <p>1<math>\frac{3}{16}</math>" Lip</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Strike Reinforcer 37-015</b></p> <p>L9000 Series</p> <p>1/4" Radius Round Corner</p>  <p>Size: 4<math>\frac{7}{8}</math>" x 1<math>\frac{1}{4}</math>"</p>	<p><b>Strike Box K510-066</b></p> <p>Size: 4<math>\frac{13}{16}</math>" x 1<math>\frac{1}{4}</math>" x 1<math>\frac{5}{16}</math>"</p> 

### Strike Dimensions and Components

Part Number	Lip	Lock Series	Door Range	Box	Screw 2 ea.
10-072*	1"	L9010 to L9496	2"	K510-066	C603-256
	1 $\frac{3}{16}$ "		1 $\frac{3}{8}$ "-1 $\frac{7}{8}$ "	K510-066	C603-256
	1 $\frac{1}{2}$ "		1 $\frac{7}{8}$ "-2 $\frac{1}{8}$ "	K510-066	C603-256
	1 $\frac{3}{4}$ "		2 $\frac{1}{8}$ "-2 $\frac{5}{8}$ "	K510-066	C603-256
	2"		2 $\frac{5}{8}$ "-3 $\frac{1}{8}$ "	K510-066	C603-256
	7 $\frac{1}{8}$ "		—	K510-066	C603-256
10-073	—	—	—	K510-066	C603-256
10-075***	—	L9000 Series	—	—	C603-256
10-078	—	L400 Series	—	K510-066	C603-256
10-079	—		—	K510-053	C603-256
10-091**	1 $\frac{3}{16}$ "	L9175, L9176	1 $\frac{3}{8}$ "-1 $\frac{7}{8}$ "	—	K510-210
XL11-820**, XL11-821**	1 $\frac{3}{16}$ "	L9000 Non-Deadbolt Functions	1 $\frac{3}{8}$ "-1 $\frac{7}{8}$ "	K510-066	C603-256
37-015	—	L9000	—	—	—

\* Specify lip length.

\*\* Specify lip length and hand of inactive door.

\*\*\* For 1 $\frac{3}{16}$ " thick doors use 1 $\frac{1}{16}$ " wide armor fronts. For 1 $\frac{3}{4}$ " thick doors and up use 1 $\frac{1}{4}$ " wide armor fronts.

**NOTE:** Strike boxes and screws can be ordered as parts.